

Anschlussvarianten für 100 mm Abwasserschlauch (u.a. Essilor)

Set air.000.800

Dichtring (3) in den Abzweig (4) einsetzen.
Abwasserschlauch (1) unter Drehung einschieben.

Den Luftschlauch (2) auf den Stutzen aufschieben.

Abzweig (4) kann direkt in vorhandene DN100 Anschlüsse (5) oder in die Abdeckplatte für das Essilor-Überlaufbecken (6*) eingesteckt werden.


Connection to 100 mm drainage tube (e.g. Essilor)

Set air.000.800

The seal (3) is set into the junction (4).
The drainage tube (1) is pushed in screwingly.


The tube (2) is pushed up onto the connecting piece.

The junction (4) can directly be pushed into the existing DN100 connections (5) or into the cover plate of the Essilor-Overfall basin (6*).

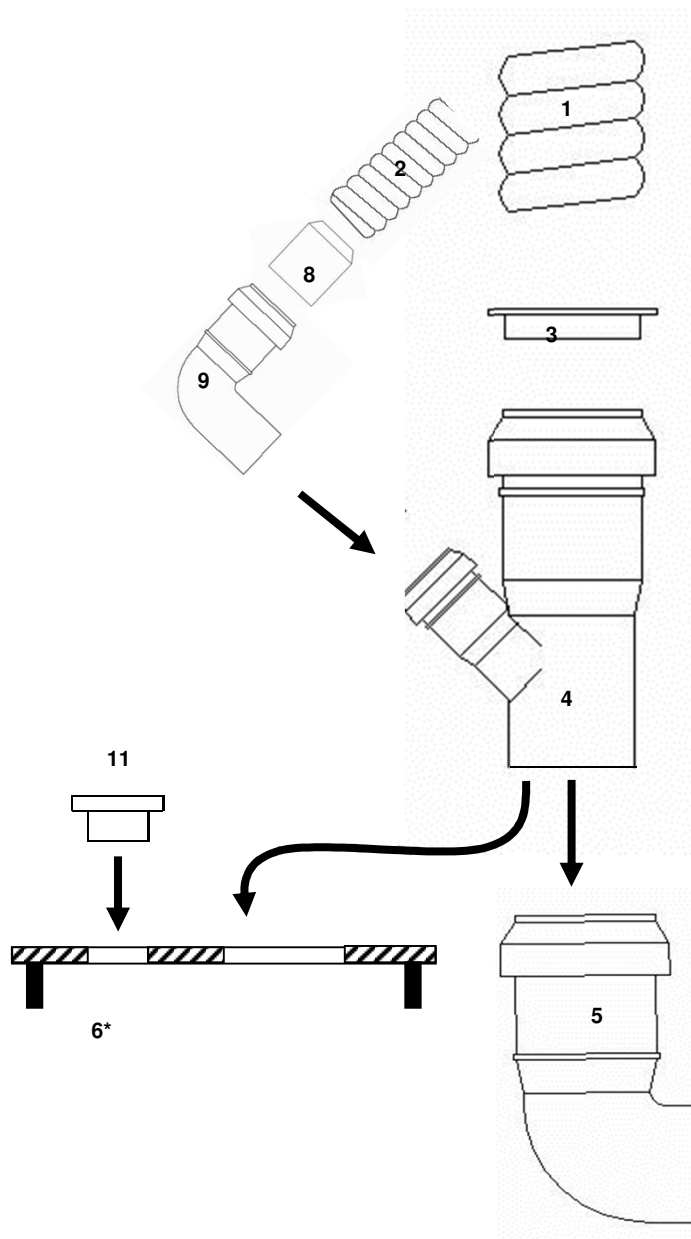


- 1 Abwasserschlauch/Drainage tube (100m)
- 2 Luftschlauch/Tube (50mm)
- 3 Dichtring/Seal ring DN100
- 4 HTEA Abzweig/Junction 45° DN100/50
- 5 DN100
- 6 Abdeckplatte Essilor-Überlaufbecken*
Cover plate Essilor-Overfall basin*

* Komplet-Set mit Abdeckplatte air001.006
* Complete set including cover plate air001.006

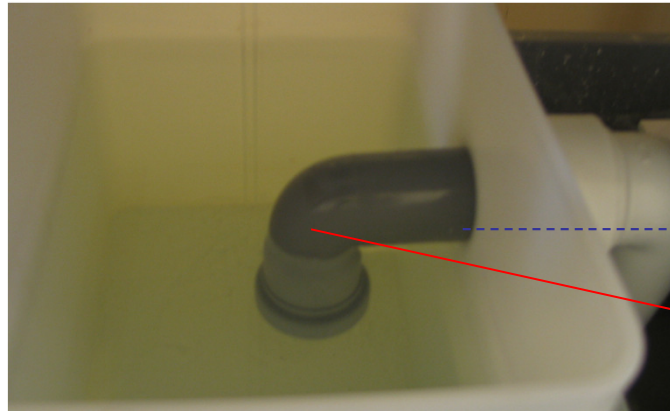

Water level


(7) 000.309

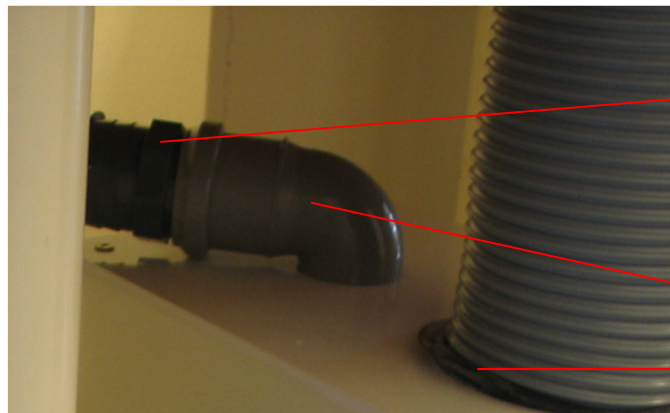

(8) 001.004

(9) 000.314

(3) seal

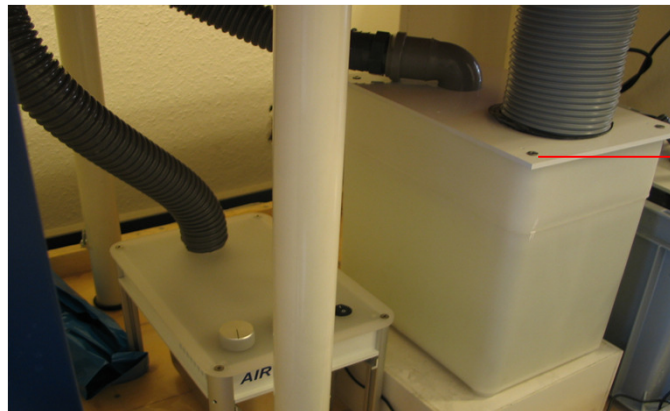

(10) 4xscrew M5x12

Einbau bei geringer Höhe (min. 8cm notwendig)

Teil (7) in den Wasserkasten einsetzen, Öffnung nach unten drehen. Wasser bis etwas über das Loch im Wasserkasten einfüllen.

Dichtring (3) um Abwasserschlauch legen und in den Wasserkastendeckel stecken. Teil (9) in die kleine Öffnung des Deckels stecken, und Teil (8) einfügen. An dessen Ende den Luftschlauch befestigen. Dieser wird direkt an den Air angeschlossen.

Es ist darauf zu achten, dass der Deckel aufliegt, und der Abwasserschlauch nicht bis ins Wasser ragt. Der Luftschlauch sollte nur so lang wie nötig sein.

Installation according to small height (at least 8cm are necessary)

Put component (7) into the water box, the opening must be turned down. Fill the water box with water until it reaches a small level above the hole of the water box.

Place seal (3) around the drainage tube and put its end into the cover plate. Put component (9) into the smaller opening of the plate, and after that fit in component (8). Connect the end of component (8) to the air tube. This connection can get connected directly to AIR.

Make sure that the cover plate bears on solidly and that the drainage tube does not have any contact with the water. The air tube should only be as long as necessary.